

SHP-DH525

USER MANUAL

Samsung SDS Digital Door Lock

Convenient Opening

User friendly access with cards and password

Welcome Function

When a user gets close to the door lock, the authorization standby mode will automatically activate.

Silent-Mode Function

When going in or out, the sound of the key entering and door opening will be suspended.

Security Assurance Function

When someone is inside the house, authorization for entry from the outside will be prohibited.

Built-in Fire Detection


Generates alarm in case of a fire

Security Function

Prevents intrusion from the outside

Smartphone Interworking function

Conveniently open the door through the Bluetooth function of a smart phone

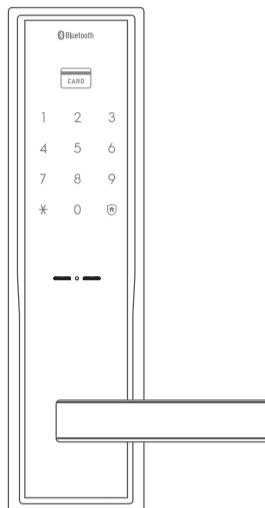

www.samsungsds-nss.com/en

GC68-02211B ED:03

Safety Cautions




This section contains important information to ensure the user's safety and prevent potential damage to property. Please, read this section carefully and use the product accordingly.

- The user shall not install or repair the product without authorization.
- Do not install the product in the place where the gap between the door and the frame is 5mm or more.
- Make sure that no unauthorized person has the access to the password.
- Do not operate the product with wet hands, and keep liquids such as water or drinks away from the product, or the product may malfunction or be damaged.
- Do not use excessive force or sharp objects to push the lockbuttons, as this can damage the product.
- Make sure that the door is completely closed when going outside. The manufacturer does not assume the responsibility for any harm caused by engagement of the lock on an improperly closed door.
- Please do not hang on the product or pull it.
- Long-term exposure to direct sunlight may cause a crack on its touch pad. Avoid exposure to direct sunlight during installation.
- During battery replacement, use a new one instead of the existing battery.
- Be sure to correctly match the poles (+/-) when installing the batteries. Install the batteries with the correct poles (+/-).
- Do not use water, benzene or alcohol when cleaning the product, as these fluids can cause product malfunction.
- Replace the batteries within 1 week after the battery replacement alarm sounds.
- Interference in wireless communication may occur when this product is used.
- According to the wireless communication environment, its battery may consume much.


Product Components

The product components used may vary depending on the installation environment.

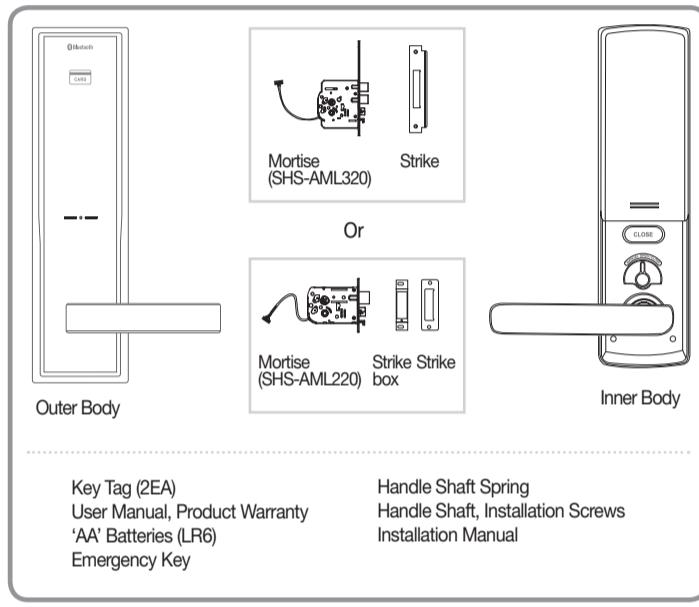


Outer Body Parts


Number Pad Unlighted

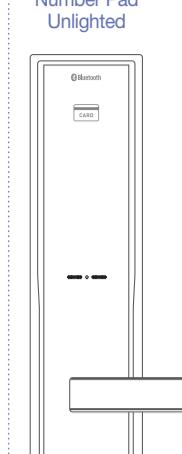


Touch Number Pad

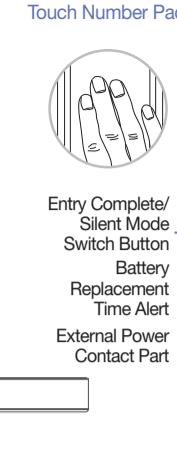


Number Pad Lighted

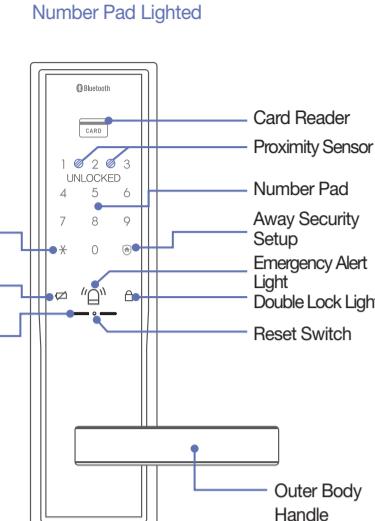

Inner Body Parts

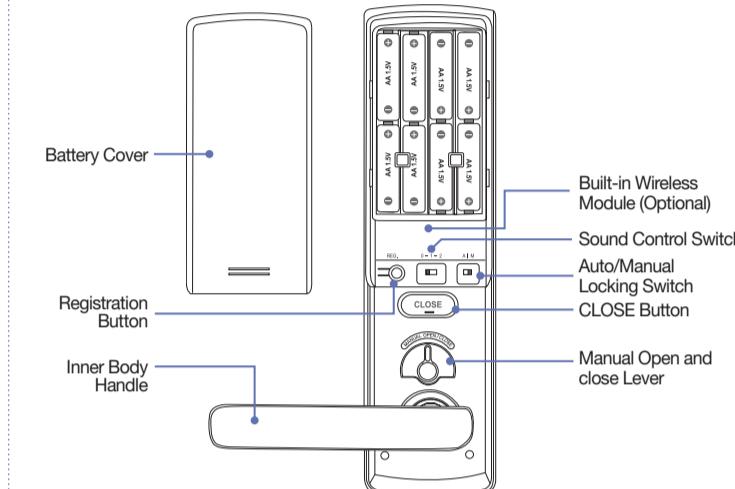

Mortise

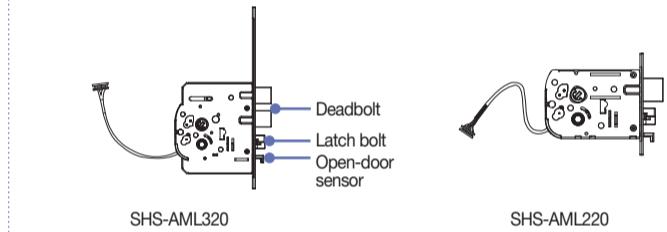

3


Opening the Door from Outside with a Password

When purchased, the product is set to Multi-leveled Security Code Entry Mode initially. Please refer to "Multi-leveled Security Code Entry Mode setting" for Common Mode setting.

※ Silent Mode

Before entering the password, press the [*] button and enter the password, then both the sound of the key entering and the door opening will be suspended. It is a useful function if you do not want to disturb neighbors when you go in and out at night.

1. Multi-leveled Security Code Entry Mode

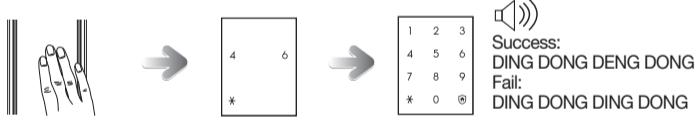

Touching [Number Pad] will light up

When two arbitrary buttons are lighted, press the buttons in order.

When the numbers on the number pad are lighted, enter the password and press the [*] button.

- If the security mode is changed as 'common mode', second step will be skipped.

2. Common Mode



Touching [Number Pad] will light up

Enter the password when the number pad is lighted, and press the [*] button.


Note

- Password must be entered after the light is on, and if does not, touch [Number Pad] and re-enter.
- To cancel, press [?] button and re-enter.
- If the password is wrong 5 times, "peep" warning alarm will sound 20 times and the system will shut-down for about 3 minutes. When malfunction happens, "beep" will sound every 10 seconds, and stop mode will be turned off automatically after 3 minutes with multiple 'beeps'.

Opening the Door from Outside with a Card or Key Tag

The door can be opened from outside using a card or key tag. Place the registered card or key tag on the card reader.

Placing the Card or Key Tag on the Card Reader

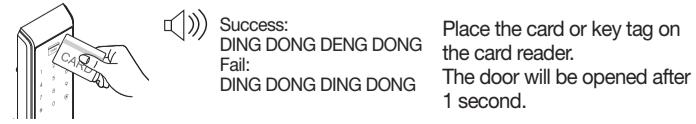


Place the card or key tag on the card reader. The door will be opened after 1 second.

Initialization (Password, Bluetooth,Card, Key Tag)


All registered data (password, Bluetooth, card, key tag) are deleted. After initialization, the password is set to '1234', and the registered card, key tag data are erased. Please register a new password after initialization.

1. Pressing the [Register] Button (from the inside)

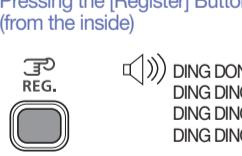

Press and hold the [Register] button for 5 seconds.

2. Entering the Numbers for Initialization (from the outside)

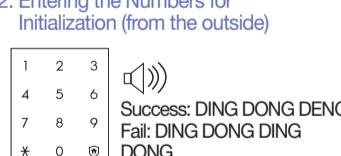

When the number pad is lighted, enter '4560852580' and then press the [*] button.

Password Change

 
The password can be 4~12 digits number. Only one password can be registered.

1. Pressing the [Register] Button (from the inside)



Open the battery cover of the inner body and briefly press the [Register] button.

2. Entering the Current Password (from the outside)



Enter the current password ('1234' after initialization) when the number pad is lighted, and press the [*] button.

Deleting Registered Cards

 
You can delete all registered cards.

1. Pressing the [Register] Button (from the inside)




Open the battery cover of the inner body and briefly press the [Register] button for 3 seconds.

2. Entering the Current Password (from the outside)



Enter the current password when the number pad is lighted, and press [*] button.

 
3. Entering the number (from the outside)



If the number pad is lights, enter '88' and press [*] button.

Activation/Deactivation of the Bluetooth Mode

 After the Bluetooth mode is activated, accessing the door lock from the outside or touching its number pad can authenticate the registered Bluetooth smartphone to open the door.
The Bluetooth mode is activated by default.




Open the battery cover, and press the [Register] button shortly.

Press the [11] or [00] button and the [*] button to activate or deactivate the Bluetooth mode.

- For the information on the pair/unpair of a Bluetooth smart phone, see the description of application use.
- Only smart phones with iOS 7.1 or higher and Android 4.3 or higher support this function. Whether to support Bluetooth, see the App description.


Pairing of a smart phone

Up to eight compatible smart phones can be paired. To pair multiple smart phones, turn off the Bluetooth of a paired smart phone, and pair another smart phone. If a Bluetooth smart phone registered is lost, replaced, or repaired and its information cannot be deleted from the door lock, the door lock should be initialized.

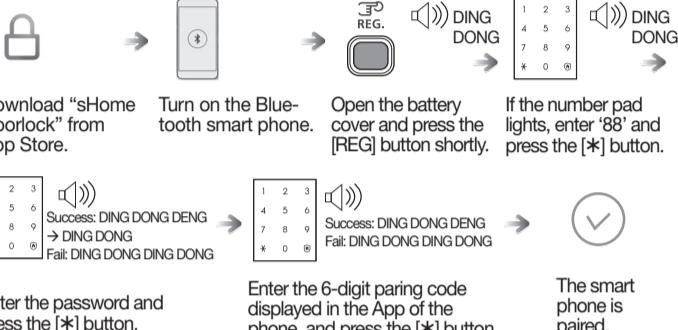

Multi-leveled Security Code Entry Mode

 You can set the security mode suitable for your use when you open the door using a password.




Briefly press the [Register] button on the inner body.

Press the [*] button after pressing the [7] or [9] button, and the security mode will be set.

7

Door Lock Time Setup Function

 This function sets the time interval between the moment the door open/closed sensor recognizes the door as closed and the moment deadbolt locks the door. In an environment that the door closes slowly and the deadbolt jams before the door is fully closed, the situation can be fixed by adjusting the door lock time.



Open the battery cover of the inner body and briefly press the [Register] button.

Press [51] ~ [59] button, and then press [*] button.

8

Set up Instructions for Alarm and Anti unlock functions

Alarm function


When this function is activated, an alarm sound and light will turn on for approximately 5 minutes duration.

Anti-Bypass function

When this function is activated, the internal handle will become tightened to prevent bypass attempts through door edge tools will be minimized.

Set up the Alarm function

Set up the Anti-Unlock function

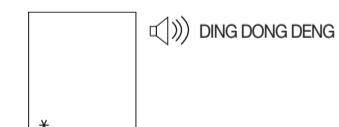

When the door is closed, user can set up the alarm function by pressing and holding the [?] button for 3 seconds until sound confirmation.

Press [*] and hold. After 3 seconds, the alarm will be come active.

Release the Alarm function

Release the Anti-Bypass function



After touching the Number Pad, contact a registered card, or enter the password and then press the [*] button.

Press the [CLOSE] button to release the internal handle from Anti-Bypass function. When this function is active, it may be harder to pull the internal handle for elderly or children to open the door from inside.

- Anti-Bypass function should only be set up when there is no one inside.

Double Authorization Mode Setting

You can delete Double authorization mode requires both card and password to open the door, ensuring more security. To setup the double authorization mode, one or more cards must be registered.

 


Briefly press the [Register] button on the inner body.



Press the [*] button after pressing the [4] or [6] button, and the authorization mode will be set.

Two-factor Authentication Mode Operation




Touching [Number Pad].

Enter the password when the number pad is lighted, and press the [*] button.

Touch the card on to the [Card Reader], if the authentication is successful, the door will open.

Sound Setting and Releasing

The sound that is generated when the number buttons are pressed, when the door is locked or when the locked door is unlocked, can be set according to the user's preference. The product is set to generate all sounds at the factory.

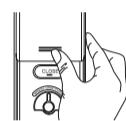

Open the battery cover on the inner body.




Put the [Sound Control] switch on one of [0], [1], or [2], and close the battery cover.

- [0] Button: All sounds except the alarm sound are deactivated.
- [1] and [2] Buttons: All sounds are activated and the sounds get bigger as the step become higher.

Automatic/Manual Locking Setting

The Automatic Locking mode allows for automatic locking of the door when it is closed.

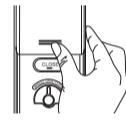

Open the battery cover on the inner body.



Set the [Automatic/Manual Locking] toggle switch of the Inner Body to the 'A/M' position.

- Automatic: The door is automatically locked 1 seconds after being closed.
- Manual: The door does not lock automatically, and [CLOSE] button must be pressed from the inside, touch [Number Pad] to close the door.

 
Security Assurance Mode Activation/Deactivation

At-home security mode is to prevent opening of the door from outside while someone is inside.

Security Assurance Mode Activation





CLOSE



DING DONG DENG DONG

While the door is locked, press [CLOSE] button on the inner body part for 3 seconds.

  Security Assurance Mode Operation



Pull the inner body handle to open the door, and it will deactivate.

 
Inside: Press the [CLOSE] button, then the sound for action-unavailable will be heard.

Outside: Press the [Number Pad] or touch with a card, then the sound for action-unavailable will be heard.

- When the security assurance function is activated, the door cannot be unlocked from the outside, so please be careful. Be especially careful not to allow children to set this mode accidentally from the inside.

Welcome Function On/Off

The welcome function is a convenient function that automatically activates the authorization standby mode when a user approaches the door, even before touching the number pad.



Open the battery cover and press [Registration] button briefly.

[1]+[*] button: Welcome function on, the one-minute alarm function on
[2]+[*] button: Welcome function on, the one-minute alarm function off
[3]+[*] button: Welcome function off

On and Off / Function Description

- Welcome function on: The mode will automatically activate the authorization standby mode when a user approaches the door lock.
- Welcome function off: The mode will authorize a user when the user enters the password on the number pad or connects a card to the number pad.
- One-minute alarm function on/ off: When someone remains in front of the door lock for more than a minute, this mode will sound the tamper prevention alarm.



- The factory defaults are set with the welcome function on and the alarm function off.
- The working distance of the infrared sensor can differ depending on light conditions and other environments. When the front door is exposed to sun light or constant bright lights it is advised to limit the usage of the sensor as it might sound the alarm.

9

Alarm Sound (Prank Prevention Function)

This function generates an alarm sound and deactivates lock operation when it is improperly handled from the outside.

This alarm will sound if an attempt is made to open the door with an invalid card, or if a wrong password is entered five times in a row.

The alarm sound is generated, and the lock is deactivated for 3 minutes. While the door is in this inactive mode, a single "DING" sound is generated every 10 seconds and seven consecutive "DINGS" will sound after 3 minutes. Following this, the lock is released from inactive mode.)

Releasing the Alarm

Inside Press the [Register] button.

Outside Apply the registered card or key tag to the card reader, or enter the password and then press the [*] button.

Built-in Fire Detection Function

This function generates the alarm sound when fire is detected so that the residence can quickly respond. The built-in fire detection function is a basic function of the lock, and cannot be released by the user.

Fire detection function is operational at about $60^{\circ}\text{C} \pm 10^{\circ}\text{C}$; this can vary depending on the installation environment.

When fire occurs, the temperature sensor detects it and flashes the [Close] button while generating the alarm sound.
The door is automatically opened after the alarm sound has stopped.
(The lock resumes normal operation if the inside temperature returns to a normal level.)

Product Specifications

Item	Specifications	
Voltage	AA Alkaline 1.5 Batteries (LR6) 4EA or 6EA (6V)	
Emergency Power Source	9V Battery (6LF22) (Separately sold)	
Operation Method	Electronic Control Method (Password, Bluetooth, Card, Key Tag)	
Weight	2.6 kg (including both inner and outer bodies)	
Product Dimensions	Outer Body (including the handle)	77.4mm (W) X 313.4mm(H) X 66.8mm(D)
	Inner Body (including the handle)	79mm (W) X 290mm(H) X 80.3mm(D)

- The contents of this user guide are subject to change without prior notice to the user in order to enhance performance of the product.

10

Using the Emergency Battery

If the batteries are not replaced after their replacement time comes, they will be completely discharged and the lock will not operate.

Opening the Door Using an Emergency Battery

Purchase an emergency battery (9V) at the nearest store.

- As the alkaline batteries offer longer life, they are recommended over the manganese batteries or rechargeable ones.

11

12